
# MERITOR® ALL-MAKES AIR DRYER TEST PROCEDURE



## STEP 1

Plug the check valve to the air tank using a 1/2" NP plug.

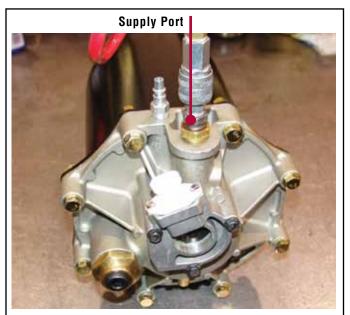

## STEP 2

Load supply line with shop air and allow unit to fill and stop.

## STEP 3

After the dryer is completely filled, use another supply line and attach it to the control port. The dryer should purge out the bottom and stop within 20 seconds.

Repeat the process two times. If the dryer stops purging, the unit is functioning to proper specifications.

#### **Note to Tech**

On a truck, the compressor stops pumping when the governor sends air to the control port of the dryer. When the control port is activated, the supply air can be removed.

